


Installation Guide / Manual (AVA-315-RF)



All controls support 230V/50Hz

AVA-315 1-Channel Radio Frequency Remote

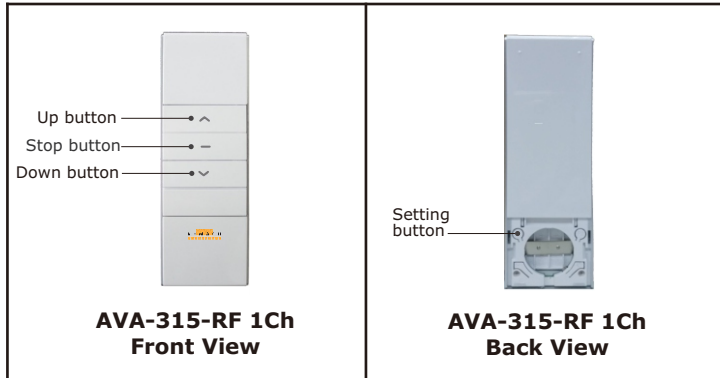

Description	AVA-315-RF
Input Voltage	3V (CR2450)
Emission Frequency	433MHz
Emission Power	10milliwatt
Work Temperature	-10°C - 50°C
Emission Distance	Open 200m, two walls 35m

Notice: The RF remote should not expose to moisture to prolong life span of battery. We recommend to replace with same type of battery as not to affect distance sensitivity performance of remote control. Remaco is environmental-friendly company, we strongly encourage dispose battery in recycling centre.


OPTION-1


AVA-315 compatible with AVA-350A Receiver (For 24Vdc Motor)



AVA-350A RF Receiver
(For 24 Vdc Motor)

Pairing AVA-315-RF 1Ch with AVA-350A

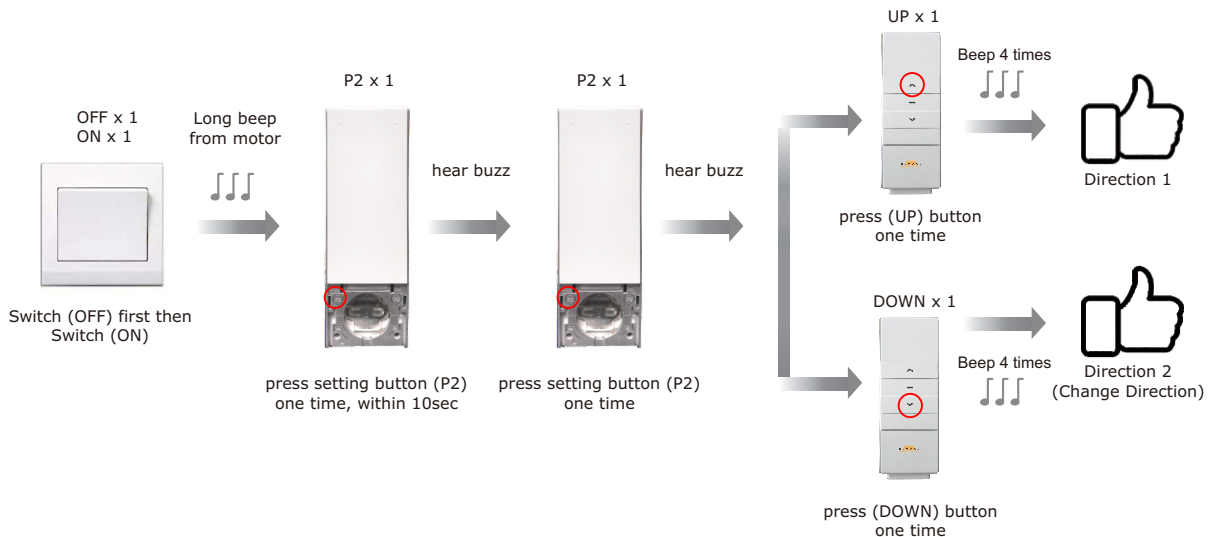

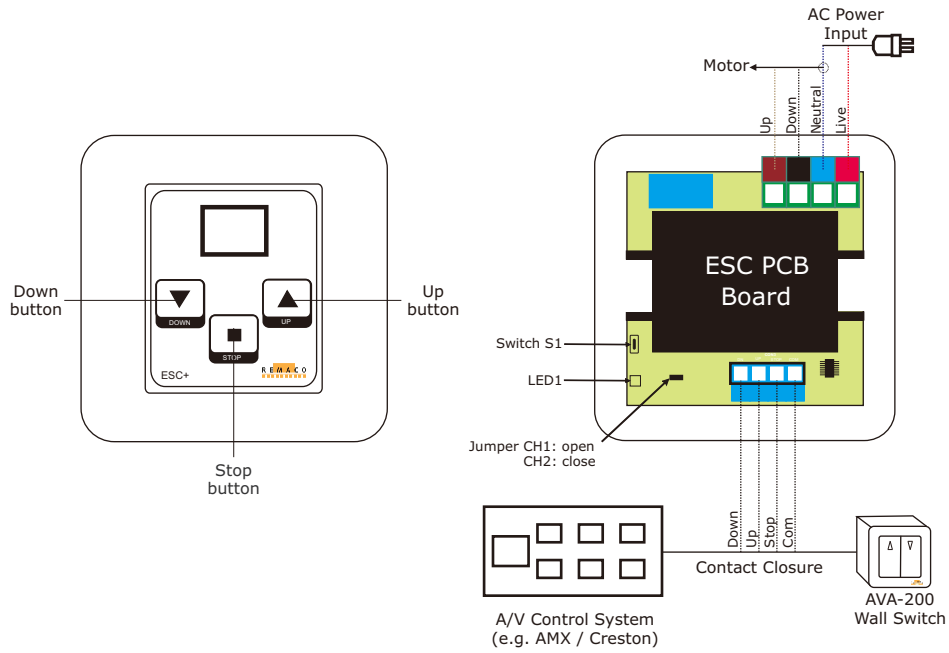

Pairing AVA-315-RF 1Ch with AVA-ESC+

Learning Mode

- Step1. Press and Hold Switch S1 for 4 seconds.
- Step2. Release Switch S1 and motor step-move up/down, LED1 flash slowly.
- Step3. Press UP button on the RF remote, motor step-move again and stop.
- Step4. LED1 off and "Learning" is completed successfully.
- * NOTE: Make sure RF remote control is set close to ESC+ not further 20cm.
- **NOTE: If nothing is pressed within 20seconds, the learning mode will disable and back to normal mode.

Delete Mode

- Step1. Press and Hold Switch S1 until the LED1 flash fast.
- Step2. Release Switch S1.
- Step3. Press Switch S1 again within 7seconds.
- Step4. LED1 off, "Delete" mode is completed successfully.